


# Miele

NAVITRONIC

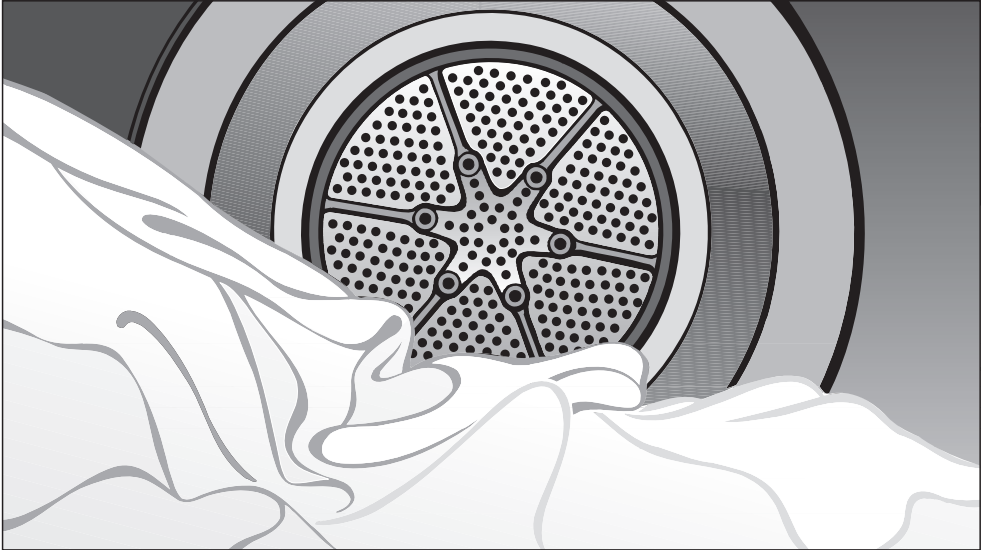

## Operating instructions for condenser tumble dryer T 4897 C

To avoid the risk of accidents or damage to the machine it is **essential** to read these instructions before it is installed and used for the first time.



M.-Nr. 06 581 410

# Caring for the environment

---

## Disposal of the packing material


The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!

Rather than just throwing these materials away, please ensure they are offered for recycling.

## Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of your appliance with your household waste.

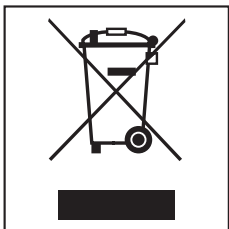

Please dispose of it at your local community waste collection / recycling centre and ensure that it presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply by a competent person. The plug must be rendered useless and the cable cut off directly behind it to prevent misuse. See the "Warning and Safety" section of this booklet for further details.

## Energy saving tips

To avoid unnecessarily long drying times and high consumption of energy:

- Make sure that your laundry is thoroughly spun before drying.

The higher the spin, the greater the savings that can be made in energy and time during drying.

- Load according to the optimum amount of laundry recommended for the programme being used (see Programme chart).

Underloading is uneconomical. Overloading gives a poorer quality of drying and may cause unnecessary creasing.

- Make sure the room in which the dryer is located is well ventilated.
- Make sure the fluff filters are clean before using the dryer.
- Check the condenser unit from time to time and clean it when necessary.

<b>Caring for the environment</b> . . . . .	2
Disposal of the packing material . . . . .	2
Disposal of your old appliance . . . . .	2
Energy saving tips . . . . .	2
<b>Warning and Safety instructions</b> . . . . .	6
<b>Operating the tumble dryer</b> . . . . .	10
Control panel . . . . .	10
Display . . . . .	11
Using for the first time . . . . .	13
<b>Notes on laundry care</b> . . . . .	14
Care symbols . . . . .	14
Tips on drying . . . . .	14
<b>How to dry correctly</b> . . . . .	15
Brief instructions . . . . .	15
<b>Favourite programmes</b> . . . . .	18
Selecting/changing a favourite . . . . .	18
Saving a favourite programme. . . . .	20
<b>Extra options</b> . . . . .	21
Short. . . . .	21
Low temperature . . . . .	21
<b>Timer</b> . . . . .	22
<b>Programme chart</b> . . . . .	23
<b>Changing the programme sequence</b> . . . . .	27
To cancel a programme. . . . .	27
To interrupt a programme . . . . .	27
Adding or removing laundry after a programme has started . . . . .	27
<b>Electronic programme locking</b> . . . . .	28

# Contents

---

<b>Cleaning and care</b> .....	29
Emptying the condensed water container .....	29
Cleaning the fluff filters .....	30
Cleaning them whilst dry .....	30
Cleaning them with water .....	31
Cleaning the tumble dryer .....	31
Cleaning the condenser unit .....	32
Removing the condenser unit .....	32
Checking the condenser unit .....	33
Cleaning the condenser unit .....	33
Replacing the condenser unit .....	34
 <b>Problem solving guide</b> .....	 35
Problem solving guide .....	35
Fault messages in the display .....	35
Other problems .....	37
Changing the lamp .....	40
 <b>After Sales service</b> .....	 41
Future updates (PC) .....	41
Appliance guarantee .....	41
Optional accessories .....	41
 <b>Installation</b> .....	 42
Front view .....	42
Installation site .....	43
Room in which the dryer is located .....	43
Transporting the machine to its installation site .....	43
Aligning the machine .....	43
Before moving the machine again (e.g. when moving house) .....	43
External condensed water outlet .....	44
Setting up the drain hose .....	44
Connection to a sink drain outlet .....	45
If you no longer wish to use an external condensed water outlet .....	45

<b>Electrical connection</b> .....	46
Electrical connection U.K. ....	46
<b>Consumption</b> .....	47
<b>Technical data</b> .....	48
<b>Settings menu</b> ▮ .....	50
Language ▮ .....	50
Time of day .....	51
Drying levels .....	52
Extending the cooling down time .....	52
Airways indicator .....	53
Anti-crease action .....	53
Lock .....	53
Buzzer .....	55
Keypad tones .....	55
Display contrast .....	55
Standby .....	56

# Warning and Safety instructions

---

To avoid the risk of accidents and damage to the machine please read these instructions carefully before using it for the first time. They contain important information on its safety, installation, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner of the machine.

## Correct use

The tumble dryer is only intended for drying fabrics which have been washed in a water solution, marked on the manufacturer's care label as being suitable for tumble drying.

"Dry cleaning kits" for freshening up garments in a tumble dryer are increasingly available on the market. If using, do so at your own risk, and follow the instructions provided on the packaging.

Any other applications may be dangerous. The manufacturer is not liable for damage resulting from improper use or operation.

## Technical safety

Before setting up the machine, check it for any externally visible damage.

Do not install or use a damaged machine.

Before connecting the machine, ensure that the connection data on the data plate (voltage and connected load) match the mains electricity supply. If in any doubt, consult a qualified electrician.

The electrical safety of this machine can only be guaranteed when continuity is complete between it and an effective earthing system which complies with local and national regulations. It is most important that this basic safety requirement is present and regularly tested, and where there is any doubt the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

Do not connect the appliance to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

# Warning and Safety instructions

---

■ The machine is built in accordance with current safety requirements.

Unauthorised repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept liability. Repairs should only be undertaken by a Miele approved technician.

Ensure current is not supplied to the machine until after maintenance or repair work has been carried out.

■ Faulty components must only be replaced by genuine Miele original spare parts. Only when these parts are fitted can the safety standards of the machine be guaranteed.

■ If the connection cable is faulty it must only be replaced by a Miele approved service technician to protect the user from danger.

■ In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the machine and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the machine guarantee.

# Warning and Safety instructions

---

■ In the event of a fault or for cleaning purposes, the machine is only completely isolated from the electricity supply when:

- it is switched off at the wall socket and the plug is withdrawn, or
- it is switched off at the mains, or
- the mains fuse is withdrawn.

## Operation

■ This equipment may only be used in mobile installations such as ships, caravans, aircraft etc. if a risk assessment of the installation has been carried out by a suitably qualified engineer.

■ The dryer must not be used without the fluff filters in place or if the fluff filters are damaged in any way.

■ The fluff filters must be thoroughly dried after cleaning. If they are still damp or wet when replaced there is a risk of faults occurring when the machine is used.

■ The dryer must not be used without the condenser unit in place.

■ Do not install the machine in a room where there is a risk of frost occurring. At temperatures around freezing point the machine may not be able to operate properly. There is a risk of damage if the condensed water is allowed to freeze in the pump, hoses and / or condensed water container. The ambient room temperature should be between +2°C and +35°C.

■ If the water is drained externally through the drain hose instead of being collected in the condensed water container, make sure the drain hose is securely attached if you hang it in a sink or basin to avoid the hose slipping and the water causing damage.

■ Condensed water is not drinking water. It can cause health problems in both people and animals.

■ Always keep the area around the machine free of dust and fluff. Dust drawn into the machine can, over time, cause blockages in the condenser unit.





# Warning and Safety instructions

---

## To prevent the risk of fire the following textiles must not be dried in this machine:


- fabrics which contain a large proportion of rubber, foam rubber or rubber like materials.
- items which contain padding or fillings (e.g. pillows, jackets).
- items which have been treated with inflammable cleaning agents.
- items which have been splashed with hair lacquer, hair spray, nail varnish remover or similar substances.
- items which have been soiled with oils or residues containing grease (kitchen oils, cosmetics etc.).
- items soiled with wax or other chemicals (e.g. mops and floor cloths).
- items which have not been thoroughly cleaned and which are still soiled with grease or oil, e.g. workwear. Such clothing may require a heavy duty detergent to get them clean. If necessary consult the detergent manufacturer for advice.

 Do not let anyone sit or lean on the door, as this can cause the machine to tip up.


 Always close the door after use. This way you will avoid the danger of:

- **children** climbing onto or into the dryer or hiding things in it.
- **pets** or other small animals climbing into it.

## Safety with children


 This machine is not a toy. To avoid the risk of injury keep children away from the machine at all times and supervise them whilst you are using it. Do not allow children to play on or near it or to play with its controls. Supervise its use by the elderly or infirm.


## Using accessories

 Accessory parts may only be fitted when expressly approved by Miele.

If non-Miele parts are used with this machine, guarantee, performance and product liability claims may be invalidated.


## Disposal of your old machine

 Before discarding an old machine, switch it off at the wall socket and unplug it. Render the plug useless and cut off the cable directly behind the machine. This should be done by a competent person.

 The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

# Operating the tumble dryer

## Control panel

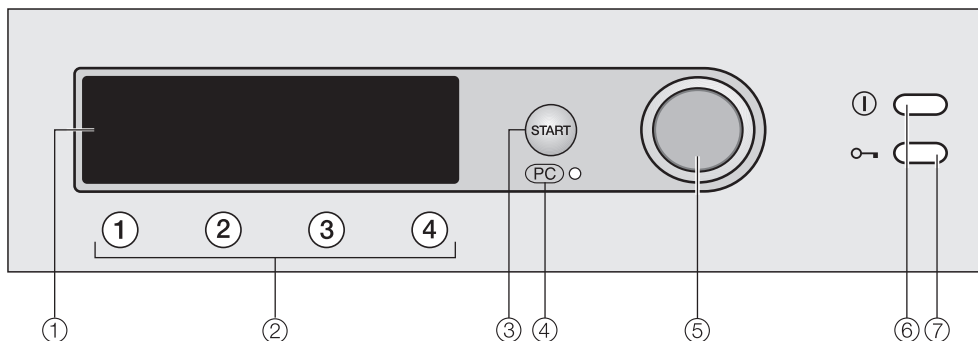

### ① Display

See the following pages for more information.

### ② Short cut buttons

For selecting an individual programme quickly. These buttons can be programmed to select your own favourite drying programmes.

### ③ Start button

### ④ Optical interface (PC)

This is used by service technicians to run diagnostic checks on your machine and can also be used to update programming data in the future.

### ⑤ Multi-function selector

This is used to select menu options (by turning it) and to confirm your selection (by pressing it).

### ⑥ On/Off button ①

To switch the dryer on or off.

### ⑦ Door button

To open the door

## Display

### Entry menu



When the machine is switched on, the entry menu (with factory default settings) appears and *Programme selection* is highlighted.

### Multi-function selector

**Turning** the multi-function selector moves the highlighting to the next menu option.

**Pressing** the multi-function selector selects the highlighted menu option.

### Short cut buttons

Pressing a short cut button selects one of the four favourite programmes, which appear on the left of the display. You can customise the favourite programmes to suit your own requirements.

The short cut buttons have different functions in the other menus. Where this is the case, an arrow ▼ will appear in the display above the short cut button, together with a description of its function .


### Programme selection

There are two ways of selecting a programme:

- Option 1: Select the *Programme selection* menu in the display, and confirm your selection by pressing the multi-function selector.
- Option 2: Press short cut button ❶, ❷, ❸ or ❹. This will automatically take you into the main menu of that programme.


# Operating the tumble dryer

## Programme selection menu

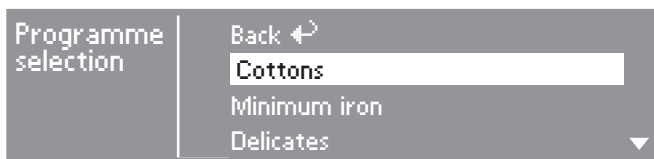

You can use the multi-function selector to select any programme. The highlighting will move up or down depending on the direction the multi-function selector is turned in. The ▲ ▼ arrows on the right of the display indicate the direction and further options. Pressing the multi-function selector takes you to the main menu of the programme selected.

## Drying programme main menu

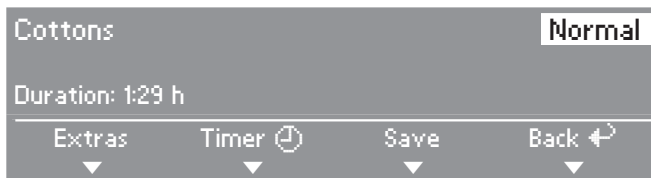

- Turn the multi-function selector to highlight either the "Drying level" or the "Programme".
- Pressing the multi-function selector selects the highlighted option and opens the relevant sub-menu.
- The sub-menus *Extras*, *Timer* and *Save* can be opened by pressing the short cut button directly below them. You return to the entry menu by pressing short cut button ④ below the word *Back*.

Alternatively, you can also highlight and confirm all options by just using the multi-function selector.

Important: All the times given in these instructions are examples, and can vary.

## Settings menu


The Settings menu is used to alter the tumble dryer's electronics to suit different requirements. See "Settings menu" for more details.

## Using for the first time

When the tumble dryer is switched on for the first time, the welcome screen will appear.

The welcome screen will not appear again after you have entered the time of day, and run an initial programme lasting longer than one hour.

## Setting the time of day

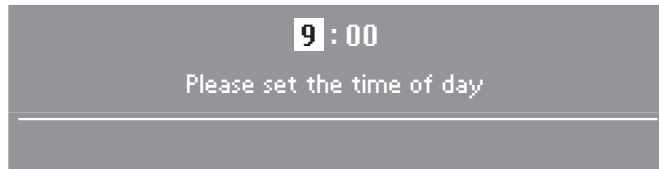




- Set the hour with the multi-function selector and confirm this setting. Now set the minutes. Once this has been confirmed, the time of day is saved in memory, and the display goes back to the entry menu.

# Notes on laundry care

---

## Care symbols


Before drying check the drying symbol on the care label. If there are no symbols, dry at your own risk!

-  . . . . . Dry at normal temperature
-  . . . . . Dry at a low temperature
-  . . . . . Do not tumble dry

## Tips on drying

- Always observe the maximum recommended loads given in the "Programme chart". Never overload the drum.

Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.

- Do not put soaking wet items into the tumble dryer. Spin them thoroughly after washing using the appropriate spin speed.
- For delicates and fabrics with the following care label  select *Low temperature*.
- Use the *Automatic* programme for drying mixed loads of cottons and minimum iron fabrics.
- Open jackets so that they can dry evenly.
- Woollens and wool blends tend to become matted and shrink if dried in a tumble dryer. They can, however, be partially dried using the *Woollens handcare* programme.

- Down-filled garments have linings which have a tendency to shrink, depending on the quality of the item. They can be partially dried using the *Smoothing* programme.
- Pure linen should only be machine dried if specified as suitable by the manufacturer on the care label, as the surface of the fabric may otherwise become rough. They can be partially dried using the *Smoothing* programme.
- Loopknit garments (e.g. T-shirts and underwear) tend to shrink depending on their quality. Do not over-dry these textiles. When purchasing these garments it is advisable to take their shrinkage properties into account.
- For garments made from very fine weave fabrics, such as shirts or blouses, only use the *Shirts* or *Delicates* programme to avoid creasing. If in doubt, reduce the load or use the *Smoothing* or *Silks handcare* programme.
- Starched laundry can be dried in the tumble dryer. To achieve the usual finish, double the amount of starch should be used.
- New dark coloured garments should be washed and dried separately from light coloured garments to avoid the danger of colours running and discolouring other garments or even plastic components in the machine. Dark coloured fibres can also settle on light coloured garments and vice versa.


## Brief instructions

The headings numbered (1, 2, 3 ...) show the operating sequence and can be used as a brief guide to using your machine.

### 1 Sort the laundry

To ensure an even drying result, separate out the washed laundry and sort it according to:

- ... the drying level required
- ... the type of fibre or weave
- ... size
- ... the moisture content after spinning.

 Make sure that objects e.g. detergent dispensing balls have been removed from the laundry. They could melt, and cause damage to the dryer or the laundry.


- Check seams and stitching to ensure that padding and linings are intact.
- Fasten duvet covers and pillow cases to prevent small items from being trapped inside them.
- Fasten hooks and eyes etc.
- Tie fabric belts and apron strings.
- Sew in or remove underwiring from bras.

### 2 Turn on the tumble dryer

- Switch the dryer on by pressing the On/Off button ①.


The tumble dryer may be switched on after loading, saving energy as the light will not come on.

### 3 Load the tumble dryer

- Press the  button to open the door.
- Load the laundry loosely into the drum.

Do not overload the drum. See the "Programme chart" for recommended loads for each programme. Overloading can cause unnecessary wear and tear to the laundry and give a disappointing drying result.

- Before closing the door make sure the fluff filter is correctly positioned in the door.

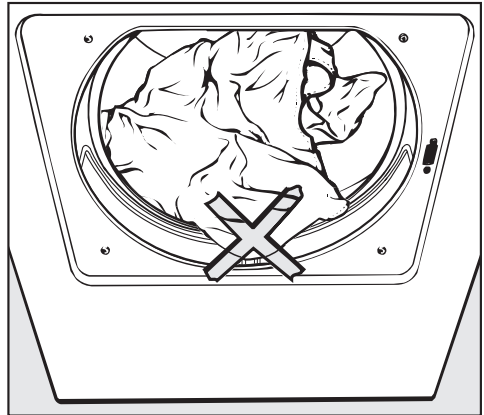

Check the laundry is right inside the drum so that it cannot get trapped or damaged when the door is shut.

- Shut the door either with a gentle swing, or lean against it and push it shut.

# How to dry correctly

---

## ④ Select a programme


- You can select a programme either by:
  - using the appropriate short cut button to select one of the four most frequently used programmes ('favourites'), or
  - by going into the *Programme selection* menu.
- If required, you can then select any *Extras* and use the *Timer* from the relevant sub-menu.

The *Start* button will flash as soon as a programme can be started.

## ⑤ Start the programme

- Press the *Start* button.

The *Start* button will light up.

- *Programme start* will appear in the display, followed by *Drying* and the programme duration.
- With sensor drying programmes the drying level reached, e.g. *Machine iron*, *Hand iron* , etc. will show in the display.

Once drying is in progress, you can press short cut:

- Button ② *Timer* to call up the current time of day and the estimated end time of the programme.
- Button ③ *Save* to save the current programme as a favourite.
- Button ④ *Cancel* to cancel the current programme.

## Estimated time remaining

When a programme is selected the estimated drying time will appear in the display. Please be aware that it is only an estimate!

The following factors all affect the estimated time remaining: residual moisture content after spinning; type of fabric; size of load; room temperature; fluctuations in power supply.

The electronics continually assess conditions in the machine and adjust the estimated time remaining for a more accurate reading. Because of this the time displayed can alter during the course of a programme.

In the same way, the *Woollens handcare* and *Soothing* programmes can finish earlier than expected if a certain temperature is reached. This can happen with particularly fine fabrics or if items were dry beforehand.



## Before the end of a programme

There is a cooling down phase at the end of the drying sequence: *Cooling down* will appear in the display. The programme will not finish until the cooling down phase has been completed.

There is no cooling down phase at the end of the following programmes:


*Woollens handcare*, *Soothing*.

## At the end of a programme

*Anti-crease* and *Finish* will appear in the display to indicate that the programme has finished. The buzzer will sound.

During the anti-crease phase (factory default setting) the drum will continue to rotate at intervals to prevent laundry creasing if you do not wish to remove it immediately. The anti-crease phase lasts for 1 hour.

## ⑥ Remove the laundry

- Press the  button to open the door.
- Remove the laundry.

Make sure that the drum is empty. If items are left in the dryer, they could be damaged by overdrying when the dryer is next used.

If the appliance is switched on at the mains and the door is opened, the drum lighting will come on. It will go out a few minutes later to save energy.

- Press the ① button to switch the dryer off.
- Clean the fluff filters.
- Close the door.

- Empty the condensed water container (unless the dryer is connected for external drainage).


# Favourite programmes

You can programme the short cut buttons to call up the four drying programmes you use most frequently.

## Selecting/changing a favourite


- Switch the dryer on.

### Entry menu

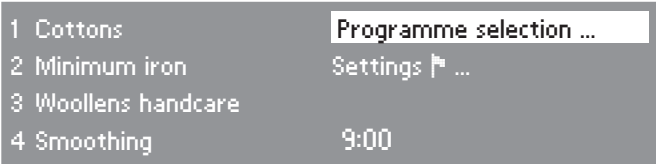

- Press short cut button ①.


### Main menu

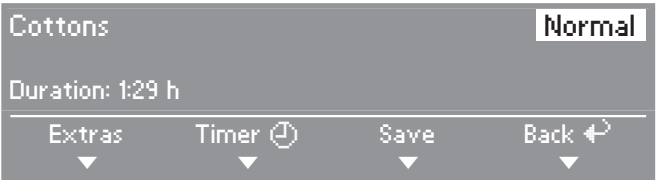

- Turn the multi-function selector to highlight either the "Programme" or the "Drying level".
- Confirm your selection of the part you want to change by pressing the multi-function selector once.

## Depending on the option highlighted, the following will be displayed:

### – Programme selection

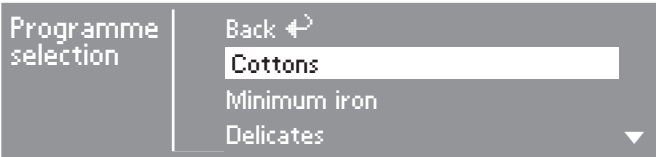

- Use the multi-function selector to select the programme you want and confirm your selection. The main menu will appear.

## Favourite programmes


Important: If you do not make a selection in the sub-menu within approx. 15 seconds, the display will revert to the main menu.

### – Programmes with drying levels



- Use the multi-function selector to select the drying level you want, and confirm your selection.
- The display will show which drying levels can be selected for each individual programme.

### – Warm air, Cool air programmes

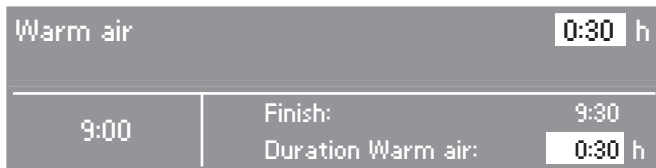

- Use the multi-function selector to select the duration you want and confirm your selection:
- 15 to 30 minutes in 5-minute stages
- 30 minutes to 2 hours in 10-minute stages.

The programme end time for the duration selected will also appear.


### – Other programmes

You cannot alter the drying level or duration for the other programmes.

# Favourite programmes

## Selecting an extra option


- Press short cut button ① *Extras*.

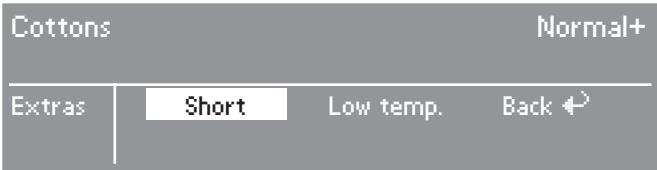

- Use the multi-function selector to select the extra option you want, and confirm your selection. The main menu will reappear.


## Saving a favourite programme

All the settings you have selected are now shown in the main menu.

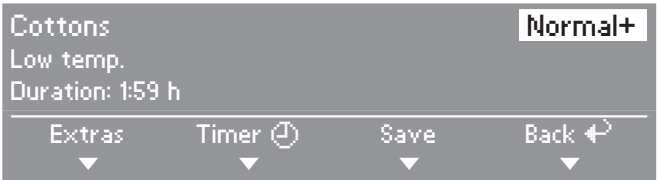

- Press short cut button ③ *Save*.

## Selecting a short cut button

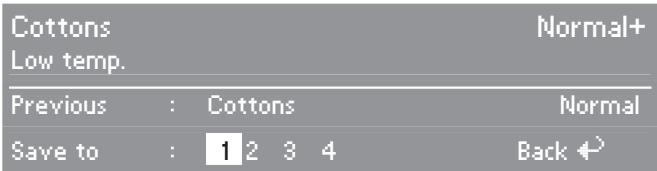

- Use the multi-function selector to select the number you want, and confirm your selection. Your settings have now been saved as a favourite programme and will appear in the Entry menu.

Repeat the procedure if you want to customise other favourite programmes, and save them to short cut buttons which have not yet been used.

### Selecting an extra option

Not all the extra options are suitable for use with every programme.

It is not possible to select the *Short* and *Low temperature* options at the same time.

- Use the multi-function selector to select the *Extra* you want, and confirm your selection.

An extra option which has already been selected

- is indicated by a tick ✓.
- can be de-selected by highlighting it and then confirming your selection.


### Short

For drying fabrics which can withstand higher temperatures. Do not use on minimum iron or delicate fabrics.

- The programme duration is shorter.

### Low temperature


Delicate fabrics are dried at a lower temperature.

- For all delicate or minimum iron fabrics with the  symbol on the care label (e.g. acrylic garments).
- The programme duration is longer.
- On some programmes *Low temperature* is a standard part of the programme and so cannot be deselected.

# Timer

You can use the timer to set the end time of a programme, allowing you to make use of night-time economy electricity rates for example. The start of a programme can be delayed by up to 24 hours.

## To open the Timer sub-menu

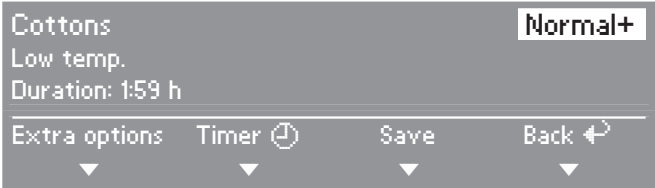

- Press short cut button ② *Timer*. This opens the *Timer* sub-menu.


## To select the end time of a programme



- Use the multi-function selector to select the programme end time, and confirm your selection.  
The programme end time will be adjusted to the next full or half hour. Once the end time has been entered, the start time of the programme will also appear.

## To start the timer




- Press the *Start* button. The timer will count down in minutes until the start of the programme. If the time until the programme start is more than one hour, the drum will turn briefly every hour to prevent creasing.

While the timer is counting down, you can still  
... change the *Extra* options or drying levels.  
... press the  button and add or remove laundry. After shutting the door again, press the *Start* button.  
... alter the programme end time by pressing short cut button ② *Timer*.

## To cancel the timer

- Press short cut button ④ once to cancel the timer. Press it again to come out of this menu.

## Programme chart

Cottons		Max. load: 6 kg*
Extra dry, Normal+, Normal**		
Fabric type	Single and multi-layered cotton fabrics such as towelling, jerseywear, underwear, flannelette bedlinen.	
Notes	<ul style="list-style-type: none"><li>– Select <i>Extra dry</i> for multi-layered and very thick fabrics.</li><li>– Do not use <i>Extra dry</i> for jersey fabrics, as they have a tendency to shrink.</li></ul>	
Extra options	Short, Low temperature (select this option for delicate fabrics with the  symbol on the care label).	
Hand iron Δ, Hand iron ΔΔ**, Machine iron		
Fabric type	Cottons or linen fabrics, e.g. table, bedlinen, starched laundry.	
Notes	<ul style="list-style-type: none"><li>– To prevent laundry from drying out it should be rolled up until you are ready for ironing.</li></ul>	
Extra options	Short, Low temperature (select this option for delicate fabrics with the  symbol on the care label).	
Minimum iron		Max. load: 3 kg*
Normal+, Normal**, Hand iron Δ		
Fabric type	Minimum iron items made of cotton, synthetic or blended fabrics, e.g. shirts, blouses, skirts and table cloths.	
Notes	<ul style="list-style-type: none"><li>– In the Minimum iron <i>Hand iron</i> programme, items are dried with very little creasing, depending on fabric type and amount of laundry.</li></ul>	
Extra options	Short, Low temperature (select this option for delicate fabrics with the  symbol on the care label).	

\* Weight of dry laundry

\*\* Note for test institutes:

Use this programme without any extra options when testing according to EN 61121 Standard.


# Programme chart

<b>Delicates</b>		Max. load: 2 kg*
<b>Normal+, Normal</b>		
<b>Hand iron Δ, Hand iron ΔΔ, Machine iron</b>		
Fabric type	For delicate garments made of synthetic fibres, mixed fibres, easy care cotton shirts and blouses, and evening wear with sequins and beading.	
Extra option	Low temperature. (Low temperature cannot be deselected).	
<b>Automatic</b>		Max. load: 3 kg*
<b>Normal+, Normal, Hand iron Δ</b>		
Fabric type	Mixed load of cotton and minimum iron fabrics.	
<b>Shirts</b>		Max. load: 2 kg*
<b>Normal+, Normal, Hand iron Δ</b>		
Fabric type	Shirts and blouses.	
Extra option	Low temperature. (Low temperature cannot be deselected).	
<b>Denim</b>		Max. load: 3 kg*
<b>Normal, Hand iron Δ</b>		
Fabric type	Denim fabrics, e.g. jeans, jackets, skirts, shirts.	
Extra option	Low temperature. (Low temperature cannot be deselected).	
<b>Woollens handcare</b>		Max. load: 2 kg*
Fabric type	Woollen fabrics	
Notes	<ul style="list-style-type: none"> <li>– To refresh and fluff up woollen garments quickly.</li> <li>– Fabrics are not completely dried in this programme. Remove garments as soon as the programme has finished and leave to finish drying at room temperature.</li> </ul>	
Extra options	Low temperature. (Low temperature cannot be deselected).	
<b>Silks handcare</b>		Max. load: 1 kg*
Fabric type	Silks, e.g. blouses and shirts.	
Notes	<ul style="list-style-type: none"> <li>– Smooths out creasing.</li> <li>– Fabrics are not completely dried in this programme. Remove garments as soon as the programme has finished and leave to finish drying at room temperature.</li> </ul>	
Extra option	Low temperature. (Low temperature cannot be deselected).	

\* Weight of dry laundry



## Programme chart

<b>Smoothing</b>		Max. load: 3 kg*
Fabric type	<ul style="list-style-type: none"> <li>– Cotton and linen fabrics.</li> <li>– Minimum iron items made of mixed fibres, cottons or synthetics, e.g. trousers, jackets, shirts.</li> </ul>	
Notes	<ul style="list-style-type: none"> <li>– Smooths out creasing caused during the spin cycle in the washing machine.</li> <li>– Fabrics are not completely dried in this programme. Remove garments as soon as the programme has finished and leave to finish drying at room temperature.</li> </ul>	
Extra option	Low temperature. (Low temperature cannot be deselected).	
<b>Warm air</b>		Max. load: 6 kg*
Fabric type	<ul style="list-style-type: none"> <li>– "Voluminous" and multi-layered fabrics whose layers have different drying characteristics, e.g. jackets, pillows.</li> <li>– For drying individual items, e.g. bath towels, bathing costumes, tea-towels.</li> </ul>	
Notes	<ul style="list-style-type: none"> <li>– Do not select the longest drying time to start with. Check the items as you are drying them to find the optimum time.</li> </ul>	
Extra option	Low temperature (select this option for delicate fabrics with the  symbol on the care label).	
<b>Cool air</b>		Max. load: 6 kg*
Fabric type	Any item which only needs airing.	

\* Weight of dry laundry

# Programme chart

<b>Sportswear</b>		Max. load: 2 kg*
<b>Normal+, Normal, Hand iron Δ</b>		
Fabric type	Sportswear which is suitable for drying in a tumble dryer.	
<b>Outerwear</b>		Max. load: 2 kg*
<b>Normal, Hand iron Δ</b>		
Fabric type	Outerwear which is suitable for drying in a tumble dryer.	
<b>Proofing</b>		Max. load: 2 kg*
Fabric type	For drying microfibre fabrics, ski wear, fine, closeweave cotton garments (poplin) or tablecloths which are suitable for drying in a tumble dryer and have been treated to provide a water and dirt resistant finish.	
Notes	<ul style="list-style-type: none"> <li>– This programme includes a proofing fixing phase.</li> <li>– <b>Only use proofing agents which are stated by the manufacturer as being "suitable for use on membrane textiles"</b> as these contain fluorochemical compounds.</li> <li>– <b>Do not dry items which have been treated with proofing agents containing parafin. Fire hazard!</b></li> </ul>	
<b>Pillows large</b>		1 pillow up to 80 x 80 cm
<b>Pillows</b>		1-2 pillows up to 40 x 40 cm
Fabric type	Pillows suitable for drying in a tumble dryer, with feather, down or synthetic fillings.	
Notes	<ul style="list-style-type: none"> <li>– Please observe the instructions on the care label. Pillows can still feel damp after being dried. You can use this programme several times until the pillow feels dry.</li> </ul>	

\* Weight of dry laundry

# Changing the programme sequence

## To cancel a programme

- Press short cut button ④ *Cancel*.

The items will be cooled down, depending how long they have been dried for and the temperature reached.

*Finish* will appear when you press short cut button ④ *Cancel* again.

- Switch the tumble dryer off by pressing the ① button.
- Switch the tumble dryer on again by pressing the ① button.
- Select a different programme.

The programme will continue as long as the cooling down phase has not been reached.


## To interrupt a programme


- Switch the tumble dryer off by pressing the ① button.

### To continue drying

- Switch the tumble dryer on again by pressing the ① button.

## Adding or removing laundry after a programme has started

- Press the  button.
- Open the door.

 Do not touch the back of the drum when adding or removing items. The drum could be very hot - danger of burning.

- Add or remove items.
- Close the door.

### To continue drying

- Press the *Start* button.

The time left shown in the display may now vary from the actual drying time.

# Electronic programme locking


---

Programme locking prevents the short cut buttons or the multi-function selector being used while drying is in progress.


The door is not locked and can be opened at any time.

## To activate programme locking

- Once the programme has begun, press and hold the *Start* button until the following appears in the display:

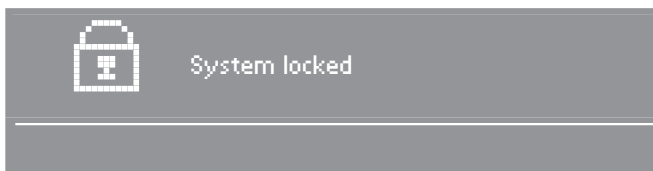

Now no more alterations can be made to the programme.

Programme locking is deactivated automatically at the end of the programme or by pressing button .

## To deactivate programme locking

- Press and hold the *Start* button until the following appears in the display:




### Emptying the condensed water container


The condensed water will be collected in the condensed water container unless the appliance has been fitted with a drain hose (see installation).

Empty the condensed water container after every drying programme.

The drying programme will be interrupted if the maximum level of the condensed water container is reached. A message will appear in the display.

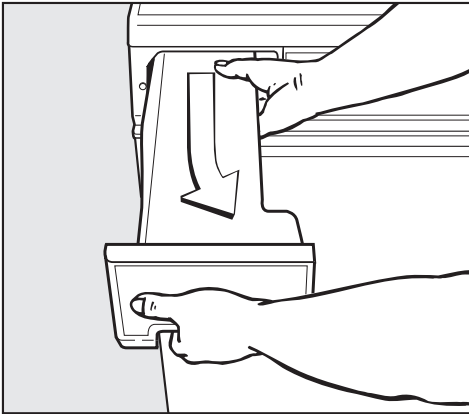

- Holding the container firmly in both hands, as shown, pull it out slightly towards the right-hand side.
- Hold the container in a horizontal position when carrying it.

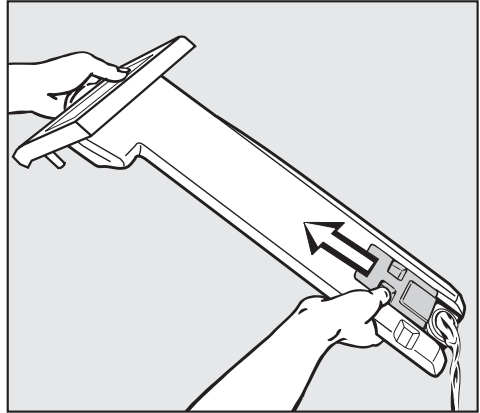

- Open the shutter and empty out the water.
- To replace the container, hold it at a slight angle (as when removing it) and push it in gently until you feel it click into position.
- To remove the message from the display, switch the dryer off and then on again.

Condensed water should not be consumed. It could lead to health problems for people and animals.


Condensed water can be put to household use (e.g. used in a steam iron or humidifier). To ensure that any residual particles of fluff in the condensed water are removed before use, pass it through a fine sieve or paper filter first.

# Cleaning and care


## Cleaning the fluff filters

The fluff which is created by the drying process is collected by the fluff filters in the door and the door opening. Clean the filters after **each** drying programme.

### Cleaning them whilst dry

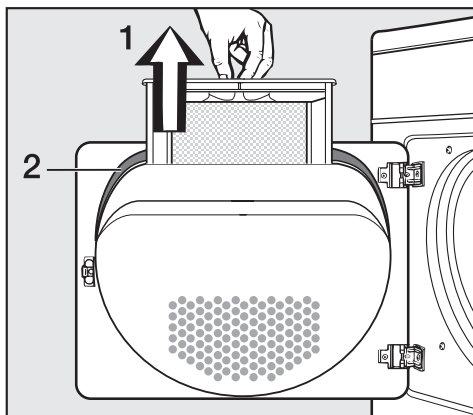

- Open the door and pull the fluff filter (1) out of the door as illustrated.

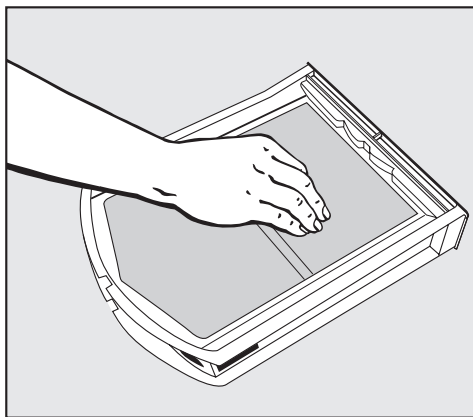


- Use your fingers to remove the fluff from the surface of the filter.

- Remove any fluff from the hollow part of the door holder. A cleaning brush is available as an optional extra from your Miele dealer or the Miele Spare Parts Department.

Tip: You can also use a vacuum cleaner.

- Once clean, push the filter back into the door holder until it clicks into position. Ensure it is facing the correct way.
- Also clean the door seal (2) with a damp cloth.

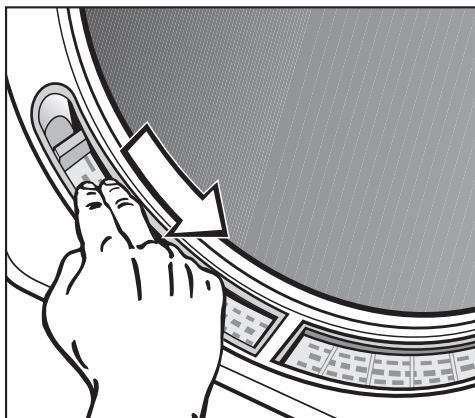


- Use your fingers to remove the fluff from the two fluff filters in the door opening.
- Close the door.


## Cleaning them with water

If there is a great deal of compacted fluff on any of the filters, they can be removed and cleaned under hot running water.

- To remove the fluff filter from the door holder see previous page.

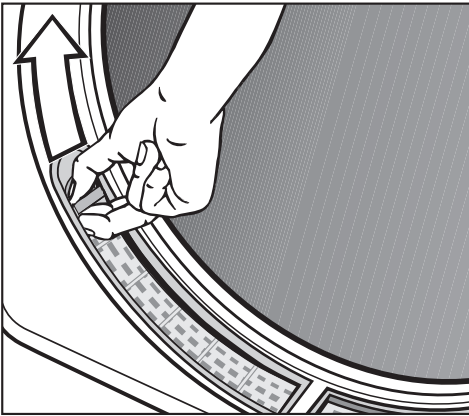

- To remove the filters in the door opening, grip the holder and push upwards in the direction of the arrow to remove it.
- Rinse the filters under hot, running water.
- Then shake the filters until no more water droplets are visible.
- Dry the filters thoroughly with care.

 Do not replace them if they are damp or wet. Damp or wet filters could cause operational faults.

- Push the large filter back into the door holder until it clicks into position. Ensure it is facing the correct way.

- Place the filters back in the door opening (the left and right filters are identical) with the finger holders facing upwards. See illustration.

## Cleaning the tumble dryer

Disconnect the machine from the mains electricity supply.

- Clean the housing and control panel with a slightly damp cloth and a mild detergent or soapy water.
- The drum and other stainless steel parts can be cleaned with a suitable proprietary stainless steel cleaner following the manufacturer's instructions.

**Do not** use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic surfaces and other parts. The machine must never be hosed down.

- Dry all parts with a soft cloth.
- A microfibre E-Cloth is available from the Miele UK Spare Parts Department which is suitable for cleaning surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals. It can be washed 300 times.

# Cleaning and care


## Cleaning the condenser unit

Detergent residue, hair and fine fluff from the dryer can get through the fluff filters and block the condenser unit.


Dust from the room in which the dryer is installed can also get into the condenser unit and cause a blockage.

**Check** the condenser unit at least twice a year. If the dryer is used frequently then clean the condenser unit after approx. 100 drying cycles.


## Removing the condenser unit

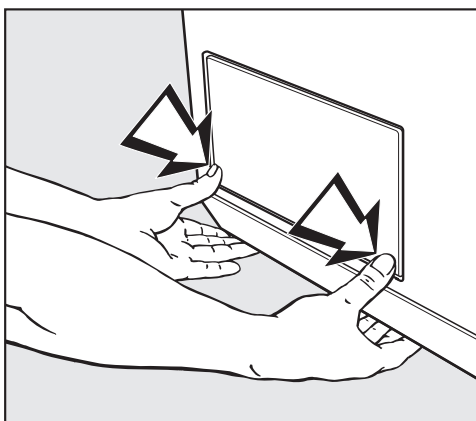

- Open the service panel by pressing the two lower corners at the same time (see illustration). The hooks at the side will prevent the panel from falling off.
- Now remove the panel by pulling it diagonally upwards.
- Then place it to one side.

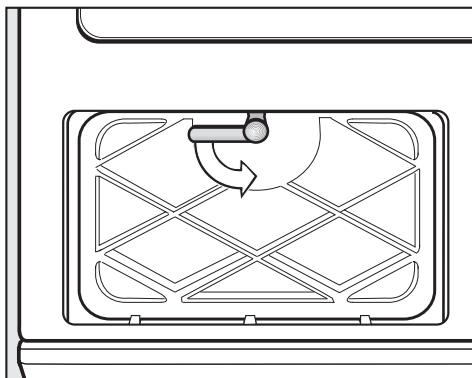


- Turn the lever on the inner cover downwards to the vertical position.
- Pull the cover forwards
- Then remove it by pulling it diagonally upwards.

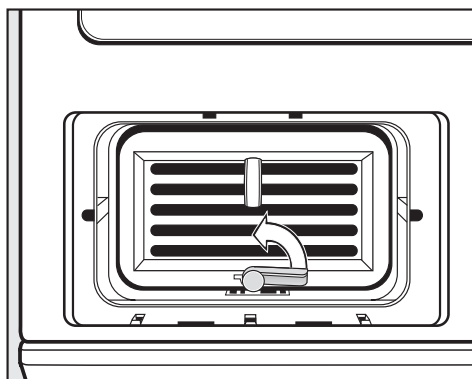


- Turn the lever on the condenser unit to the vertical position.



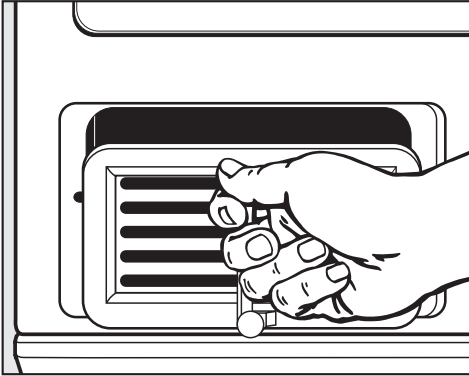

- Pull the condenser unit out of its housing by the handle.

### Checking the condenser unit

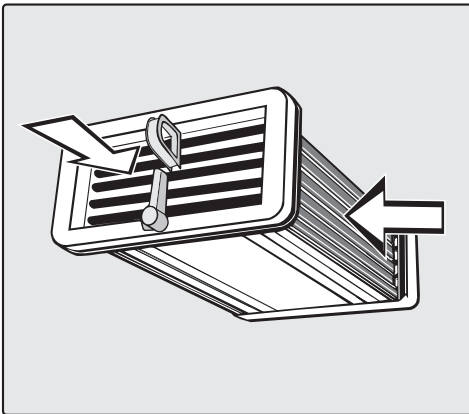

- Hold the condenser unit up to the light **as shown**.
- Check to see if there is any fluff inside it.  
The arrows in the illustration above indicate where to look.

If you cannot see any fluff:


- Replace the condenser unit (see following page).

If you can see some fluff:

- Clean the condenser unit as described below.

### Cleaning the condenser unit

- **When rinsing the condenser unit, make sure you position it as shown in the next two illustrations.**

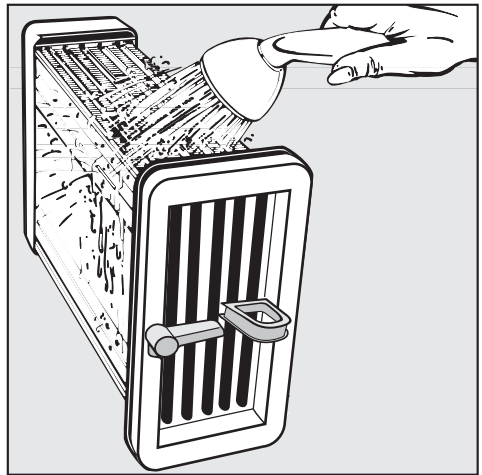

- Use a shower head or similar to rinse the unit out **as shown**.

## Cleaning and care



- Then flush the unit through from the front.
- Check the condenser unit again for any visible fluff and if necessary flush it through again until it has all gone.
- Remove any soiling still visible inside the housing unit by hand using a damp cloth. Do not try and access areas you cannot reach by hand!
- Also make sure the rubber seals are clean.


The rubber seals must not be removed and must be free of kinks.

### Replacing the condenser unit

- With the handle facing upwards, push the condenser unit back into position in its housing.
- Turn the lever down to the horizontal position, making sure that the hook on the lever clicks into the groove.


When replacing the cover after cleaning, ensure that the rubber seal fits correctly into the groove.

- Replace the cover making sure the hooks locate correctly. Hold it at an angle and push it gently downwards.
- Then turn the lever upwards into the horizontal position to lock the cover.
- Replace the service panel and press the upper edge until it clicks into position.





 It is important to ensure that both the condenser unit and the cover are correctly positioned and locked otherwise water may leak from the machine.

## Problem solving guide




With the help of the following notes, minor faults in the performance of the appliance, some of which may result from incorrect operation, can be put right without contacting the Service Department.

 Repair work to electrical appliances should only be carried out by a suitably qualified person in accordance with local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

### Fault messages in the display

Problem	Possible cause	Remedy
Machine locked. Enter lock code	The lock has been activated.	See Settings menu  .
 System locked	The electronic programme lock has been activated.	Press and hold the <i>Start</i> button until <i>Ready</i> appears in the display.
 Adjust the load – the programme is cancelled – the buzzer sounds	This is not a fault. The electronic unit recognised that there was no laundry in the drum and cancelled the programme. Drying individual garments or items which are already dry can also cause the programme to be cancelled.	Use the Warm air programme (timed drying) to dry individual items. <b>To delete the fault message:</b> – Open the door or switch the dryer off and then back on again.
 Empty out the container – the programme is cancelled – the buzzer sounds	The condensed water container is full or there is a kink in the drain hose.	– Empty out the condensed water container or check the drain hose. <b>To delete the fault message:</b> – Switch the dryer off and then back on again.

# Problem solving guide

Problem	Possible cause	Remedy
<b>The following message appears after the programme has finished:</b> <b>Clean the filters</b>	<p>The dryer is not working efficiently or economically.</p> <p>Possible cause: The filter is clogged with fluff or with detergent residues.</p>	<p>– Cleaning the filters is usually all that is required. However, if the message does not go out after you have cleaned the filters, then also check all the possible causes described under "The drying process goes on too long or even switches off".</p> <p><b>To delete the fault message:</b></p> <p>– Switch the dryer off and then back on again.</p>
		<p>You can adjust the setting which controls when or if the message <i>Clean the filters</i> appears.</p> <p>See Settings menu , Airways indicator.</p>
 <b>Technical fault</b> – <b>the programme is cancelled.</b> – <b>the buzzer sounds</b>	<p>No obvious cause.</p> <p>In some circumstances, <i>Clean the filters</i> has already been displayed.</p>	<p>– Clean the filters and the condenser unit.</p> <p><b>To delete the fault message:</b></p> <p>– Switch the dryer off and then back on again.</p>
	<p>There is a fault if, despite doing this, the programme is cancelled and the fault message appears again.</p>	<p>Contact the Miele Service Department.</p>
 <b>Programme finish time changed</b>	<p>This is not a fault.</p>	<p>Settings were changed while the timer was counting down to the start of a programme, or there was a power cut.</p>


## Other problems

Problem	Possible cause	Remedy
<b>The drying process goes on too long or even switches off.</b>	In some circumstances the following message also appears: <i>Clean the filters</i> <b>Please check all the possible causes and switch the dryer off and then back on again.</b>	
	Ventilation to and from the dryer may be insufficient (e.g because it is installed in a small room). This has caused the temperature in the room to rise sharply.	Open a door or window while the machine is in operation for increased air flow.
	The fluff filters are clogged up with fluff or were still wet when they were replaced.	<ul style="list-style-type: none"> <li>– Remove any fluff.</li> <li>– The fluff filters must be completely dry.</li> </ul>
	The laundry has not been spun sufficiently.	Make sure that your laundry is thoroughly spun at the washing machine's maximum spin speed.
	The tumble dryer has been overloaded.	Do not exceed the maximum load for the programme selected.
	Metallic components, e.g. zips have prevented the dryer from registering the correct moisture level in the laundry.	<ul style="list-style-type: none"> <li>– Open zips next time.</li> </ul> If the problem occurs again, dry garments with long zips using the Warm air programme (timed drying).
	Detergent residues, hair and fine fibres can block up the condenser unit.	Check the condenser unit from time to time and clean it if necessary.
<b>The laundry is not sufficiently dry.</b>	The vents below the door are blocked.	Remove any objects that are blocking the vents.
	The load consisted of different fabrics.	<ul style="list-style-type: none"> <li>– Finish drying using the <i>Warm air</i> programme.</li> <li>– Select a different programme the next time.</li> </ul>

## Problem solving guide

Problem	Possible cause	Remedy
<b>The condenser unit service panel will not shut.</b>	The inner cover of the condenser unit has not been locked properly and/or the condenser unit has not been positioned correctly.	<ul style="list-style-type: none"> <li>– Ensure that the condenser unit is positioned correctly and lock the cover.</li> <li>– Check the rubber seals.</li> </ul>
<b>Water leaks from the machine after the condenser unit has been cleaned.</b>	Fluff has collected at the bottom of the condenser unit housing.	<ul style="list-style-type: none"> <li>– Use a cloth to remove any fluff from the inside of the condenser unit housing.</li> </ul>
<b>Items made of synthetic fibres are charged with static electricity after drying.</b>	Synthetic fibres tend to attract static charge.	Static charge can be reduced by adding a fabric conditioner to the final rinse in the washing machine or a fabric conditioner sheet to the load in the dryer.
<b>There is a build up of fluff.</b>	Fluff is principally the result of friction when garments are being worn and washed. Machine drying hardly causes any fluff to form and has been established by research institutes to have no appreciable effect on the lifetime of fabric.	Fluff is collected by the fluff filters and can be easily removed (see Cleaning and Care).
<b>Feather filled pillows smell after drying.</b>	Feathers are a natural product and this is quite normal.	The smell will dissipate after sufficient airing.

## Problem solving guide

Problem	Possible cause	Remedy
<b>The programme does not start and the display is dark.</b>	No obvious cause.	<ul style="list-style-type: none"> <li>– Have you followed the correct procedure for using the machine?</li> <li>– Is the plug correctly inserted in the socket and switched on?</li> <li>– Is the appliance door closed properly?</li> <li>– Has the fuse or circuit breaker tripped?</li> </ul>
<b>The interior drum lighting does not come on.</b>	The lighting switches off automatically (to save energy).	Switch the dryer off and then on again.
	The lamp needs changing.	Change the lamp as described at the end of this section.
<b>The display is in a different language.</b>	A different language has been selected in the Settings - Language  menu.	Set the language you want. The flag symbol will guide you.
<b>The <i>Start</i> button light flashes when a programme is being selected.</b>	This is not a fault.	The flashing indicates that a programme can be started. After the programme has started the flashing will change to a constant light.
<b>The display is dark and the light ring around the multi-function selector is not lit up. The <i>Start</i> button is flashing slowly.</b>	The display has switched off automatically to save energy (Standby mode).	The display and the multi-function selector will light up when one of the buttons is pressed.
	The lighting is defective if it does not come on when one of the buttons is pressed.	Contact the Miele Service Department.


# Problem solving guide

## Changing the lamp

Disconnect the machine from the mains electricity supply.

- Open the door.

You will find the interior lamp cover at the top of the drum aperture.

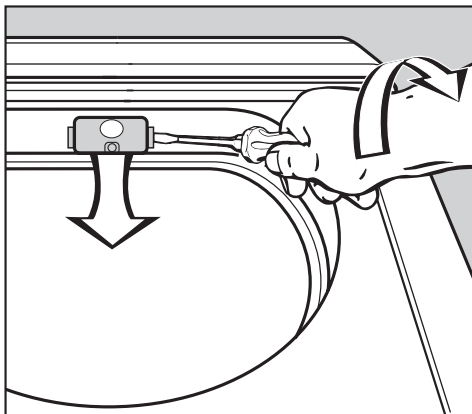

- Insert a suitable tool, such as a wide bladed screwdriver, under the side edge of the lamp cover as illustrated.
- Apply a little pressure and whilst doing so turn your wrist in the direction of the arrow to open the cover.

The cover will open downwards.

The temperature resistant lamp should only be ordered from your Miele dealer or the Miele Spare Parts Department.

The lamp specification and maximum wattage is stated on the data plate and on the lamp cover.

- Replace the lamp.
- To close the cover push it upwards and press it on the left and right until you hear it click into position.


⚠ Ensure that it is fitted into position securely, as any moisture could cause a short circuit.



In the event of any faults which you cannot remedy yourself, or if the machine is under guarantee, please contact

- your Miele dealer or
- the Miele Service Department (see back cover for contact details).

When contacting your dealer or the Service Department, please quote the model and serial number of your machine, both of which are shown on the data plate situated on the right hand side below the drum aperture.

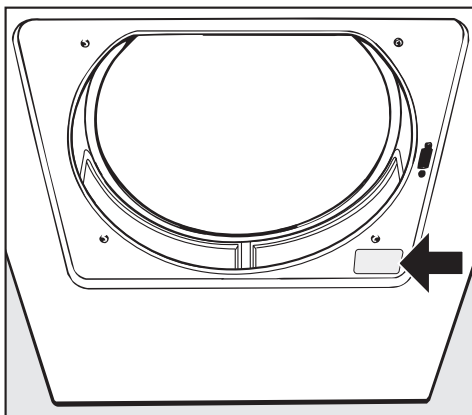

### Future updates (PC)

The indicator or check light marked **PC** on the fascia panel is the interface used by the Miele service technicians during service work for testing purposes and for updating the machine's programme data.

### Appliance guarantee

Please see the guarantee card supplied with your machine.


### Optional accessories

Optional accessories for this dryer are available from your Miele Dealer or from the Miele Spare Parts Department.

Please note that telephone calls may be monitored and recorded for training purposes.

# Installation

## Front view

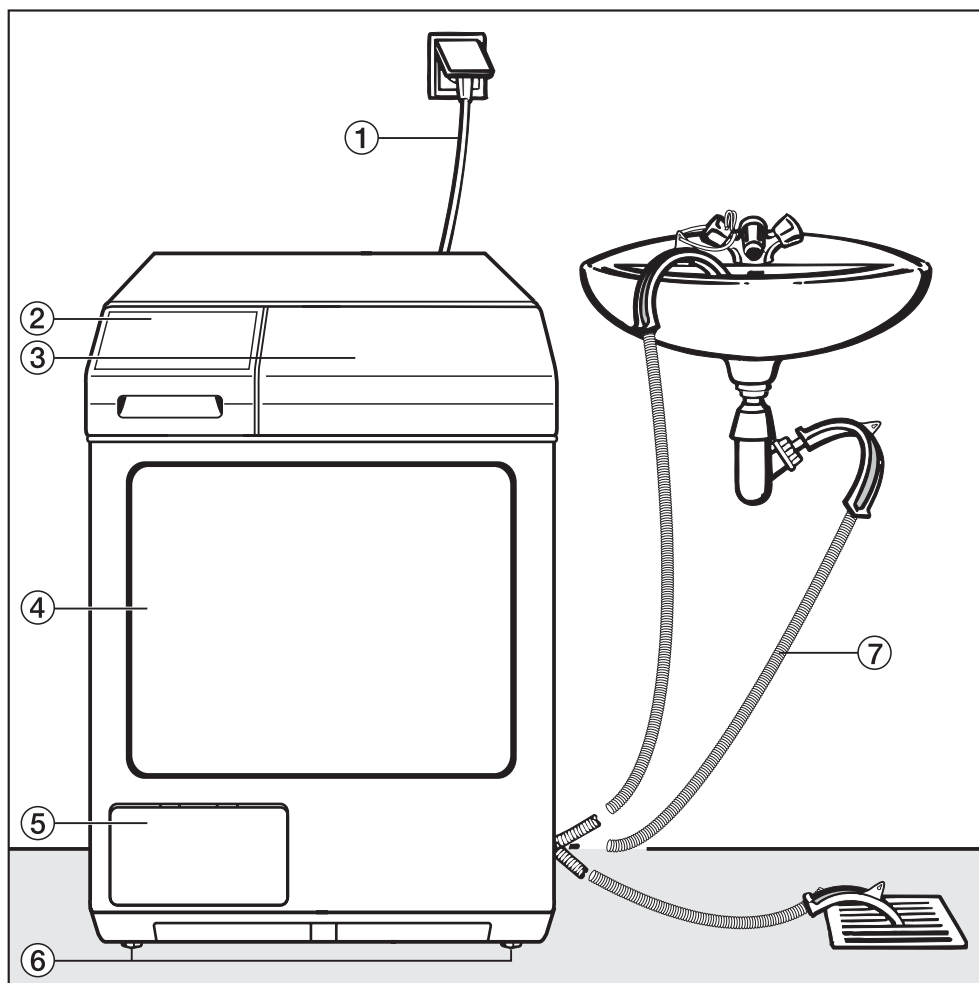

- ① Mains connection cable
- ② Condensed water container
- ③ Control panel
- ④ Door

- ⑤ Service panel for condenser unit
- ⑥ Four height-adjustable screw feet
- ⑦ External drainage options (e.g. via wash basin, wash basin drain outlet, or gully).

## Installation site

⚠ Make sure the dryer door can be opened without hindrance after installation.

## Room in which the dryer is located


Air taken in for use in the drying process will be warm when it is expelled from the rear of the dryer. This expelled air heats up the air in the room. It is therefore very important to ensure that the room is adequately ventilated, particularly if the dryer is located in a small room. Otherwise running times and energy consumption could be increased.

## Transporting the machine to its installation site


When moving the machine you can hold it by the lid where it protrudes to the rear of the dryer.

To manoeuvre the dryer out of its packing case to its installation site you will also need to hold it by the front feet.

## Aligning the machine

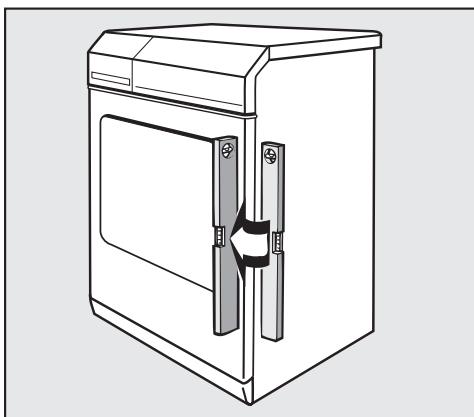

The machine must be perfectly level to ensure safe and proper operation.

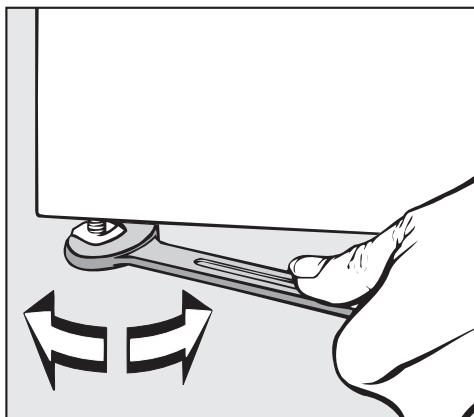

- The screw feet can be adjusted to compensate for any unevenness in the floor.

⚠ The ventilation gaps in the plinth must not be covered over as this would prevent a sufficient intake of air.

This tumble dryer is not suitable for building under (due to its sloping fascia).

## Before moving the machine again (e.g. when moving house)

After each use a small quantity of condensed water will collect in the area around the pump. This water can run out if the machine is tipped up when it is being moved. It is a good idea to run the *Cool air* programme for approximately 1 minute before moving the machine. Any remaining condensed water will then be fed into the condensed water container or out through the drain hose.

# Installation

## External condensed water outlet


When drying is in progress, condensed water is pumped into the condensed water container through the drain hose at the back of the dryer. The condensed water can also be drained off directly if the machine is installed near a sink, drain outlet etc. so that the condensed water container does not have to be emptied.

The drain hose (approx. 2 m long) is stored in the dryer. It must be pulled out of the dryer to its full extent if condensed water is to be drained externally. Maximum delivery head: 1 m.

If it is not long enough, an extension hose is available as an optional accessory through your dealer or from the Miele Spare Parts Dept.


### Setting up the drain hose

From the back of the dryer at the top:

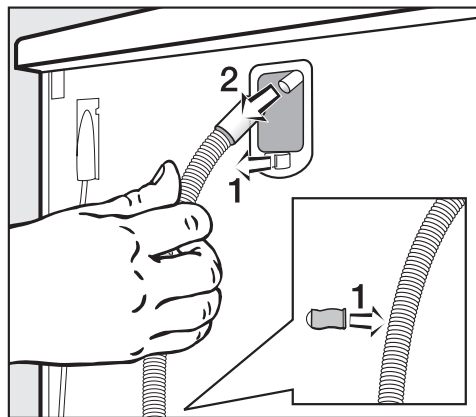

- Unclip the drain hose from clip (1).
- Then pull it off holder (2).

From the back of the dryer at the bottom:

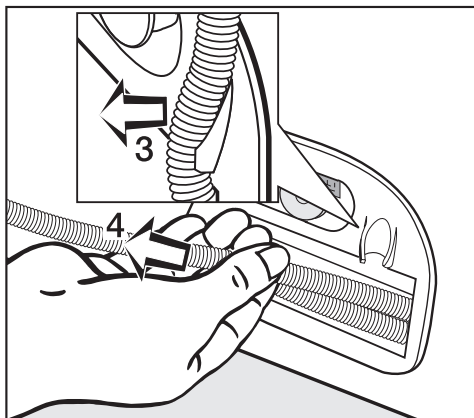

- Unclip the drain hose from clip (3).
- Then pull the drain hose **completely out of the dryer towards the left (4)** (See illustration). Important:


⚠ Do not let the drain hose become kinked, as this could damage it.

⚠ If you want to drain the water off into a sink you will need to secure the hose carefully, e.g. by tying it to a tap to make sure it cannot slip during use. Otherwise there is a risk of overflowing water which could cause damage.


Use the bow-shaped guide to prevent the drain hose from becoming kinked (see "Front view" illustration).

## Connection to a sink drain outlet

The drain hose can be connected directly to a sink drain outlet.

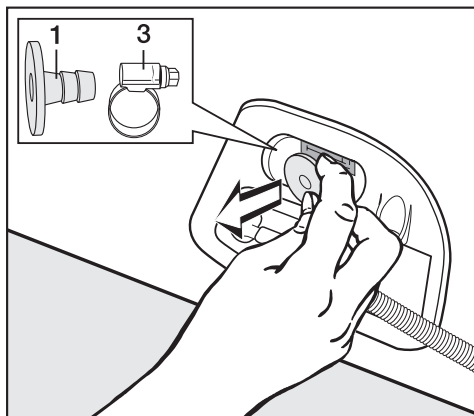

- Remove the following from the back of the dryer at the bottom:  
Adapter 1 and hose clip 3 behind it.

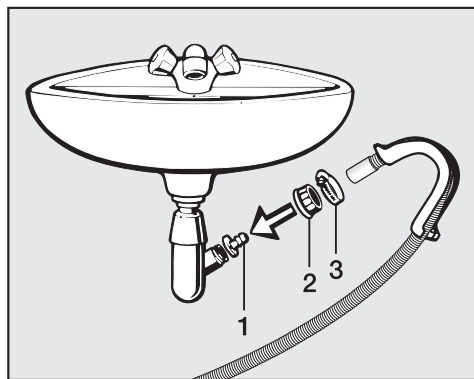

- Fit adapter 1 to the sink drain outlet using nut 2.

If this nut has a flat disc in it you should take the disc out first. Important: if this nut has a washer or seal in it this must not be removed!

- Attach the end of the hose to adapter 1.
- Use a screwdriver to tighten hose clip 3 up close to the nut.

## If you no longer wish to use an external condensed water outlet

**⚠ Do not** push the drain hose back into the dryer. Doing this could cause it to become kinked and damaged in the dryer.

- Loop the drain hose up.
- Use a suitable cable tie to secure the looped hose to the back of the dryer, or simply lay the looped hose behind the dryer.
- Attach the open end of the drain hose back onto the holder at the back of the dryer at the top (see holder 2 in "Setting up the drain hose").

# Electrical connection

---

## Electrical connection U.K.

All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with national and local safety regulations.

Ensure power is not supplied to the appliance until after installation work has been carried out.

The appliance is supplied with a mains cable with moulded plug ready for connection to a 230-240V mains supply. **The voltage and connected load are given on the data plate.**

Please ensure these match the household mains supply. The fuse rating is quoted on the plug.

Connection should be made via a suitable switched socket which is easily accessible after installation.

For extra safety it is advisable to install a residual current device (RCD), with a trip current of 30 mA (in accordance with DIN VDE 0664, VDE 0100 Section 739).

Do not connect via an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

## Non-rewireable plugs BS 1363

The fuse cover must be refitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words on the base of the plug (as applicable to the design of plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

**WARNING: THIS APPLIANCE  
MUST BE EARTHED**

# Consumption

Programme	Load	Final spin speed	Energy	Time
		in a domestic washing machine		
	kg*	rpm	kWh	Minutes
<b>Cottons Normal</b>	6.0	800 (70 % residual moisture)**	3.90	109
		1200	3.10	87
		1400	2.95	83
		1600	2.80	81
		1800	2.55	74
<b>Cottons Hand iron ΔΔ</b>	6.0	800 (70 % residual moisture)**	3.25	93
		1200	2.40	71
		1400	2.25	66
		1600	2.15	64
		1800	1.85	56
<b>Minimum iron Normal</b>	3.0	1000 (50 % residual moisture)**	1.50	47
<b>Minimum iron Hand iron Δ</b>	3.0	1000	1.30	41
<b>Delicates Normal</b>	2.0	–	1.25	78
<b>Automatic Normal</b>	3.0	900	1.85	66
<b>Shirts Normal</b>	2.0	900	1.25	48
<b>Denim Normal</b>	3.0	800	1.75	52
<b>Woollens handcare</b>	2.0	900	0.15	4
<b>Silks handcare</b>	1.0	–	0.15	5
<b>Smoothing</b>	3.0	–	0.30	8
<b>Sportswear Normal</b>	2.0	–	1.40	50
<b>Outerwear Normal</b>	2.0	–	1.50	57
<b>Proofing</b>	2.0	–	1.60	56
<b>Pillows</b>	1.0	–	1.60	84
<b>Large Pillows</b>	1.2	–	1.60	98

\* Weight of dry laundry

\*\* EN 61121 test programme

All data established in accordance with EN 61121.

Before testing in accordance with EN 61121, dry a 3 kg load of cotton laundry with 70% residual moisture as per the above standard using the Cottons Normal programme without any Extra options.

**Consumption data can vary from the nominal values given above depending on the size of the load, types of textiles, residual moisture levels after spinning, fluctuations in the electricity supply and any Extra options selected.**

## Technical data

---

Height	850 mm (adjustable +7 / -7 mm)
Width	595 mm
Depth	580 mm
Depth with door open	1,060 mm
Weight	54 kg
Drum volume	100 litres
Maximum capacity	6 kg dry weight
Capacity of condensed water container	approx. 3.5 l
Hose length	2 m
Maximum delivery head	1 m
Maximum drain hose length	3 m
Length of connection cable	2 m
Voltage	see data plate
Connected load	see data plate
Fuse rating (UK)	see plug
Lamp wattage	see data plate
Energy consumption	see "Consumption data" section
Test certificates awarded	Radio / TV suppression, VDE




## Settings menu for changing standard settings

The Settings menu is used to alter the dryer's electronics to suit different requirements.  
Settings can be altered at any time.


# Settings menu 🚩

## To open the *Settings* menu

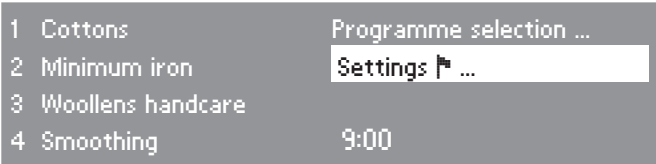

- Select *Settings* 🚩 from the entry menu and confirm your selection with the multi-function selector.


## To select a setting

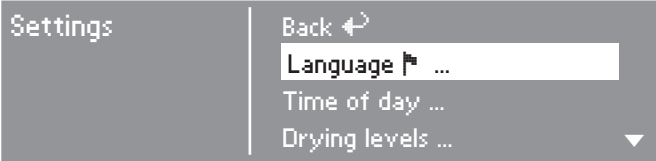

- Select the setting you want to change, and confirm your selection.

If you do not make a selection in the sub-menu within approx. 15 seconds, the display will revert to the main menu.

## To close the *Settings* menu

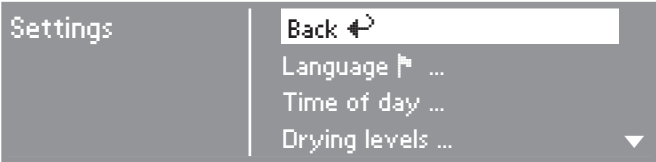

- Select *Back* and confirm your selection.  
The display will revert to the entry menu.

## Language 🚩

The display can be set to appear in several different languages.

A tick ✓ will appear beside the language to show that it has been set.

The flag 🚩 after the word *Language* acts as a guide to prevent a language which will not be understood from being set.

## Time of day


First select either a 24 hour or 12 hour clock.  
Then set the current time of day.

### To select a 24 hour or 12 hour clock

- Select either the 24 hour or the 12 hour clock option, and confirm your selection.


The display will then change to the screen for setting the time of day.

### To set the time of day

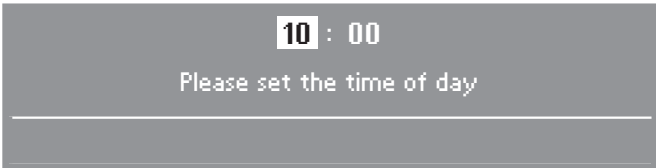

- Use the multi-function selector to select the hour and confirm your selection. Now set the minutes. Confirm the selection again to save the time of day in memory.

The time of day can be changed at any time later on by:

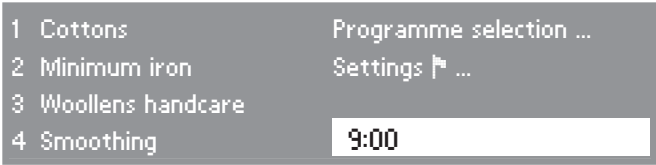

- Highlighting the time of day in the Entry menu and confirming your selection.

The display will then change to the screen for setting the time of day.

## Settings menu

---

### Drying levels

You can alter the drying levels for the *Cottons* and *Minimum iron* programmes.

The bar chart shows you the setting.

The machine is delivered with a medium setting set as standard.

Depending on the setting, the programme duration will be shorter (Damper) or longer (Drier).

### Extending the cooling down time

The cooling down phase which takes place before the end of a programme can be lengthened if required. This makes the garments easier to handle.

The bar chart shows you the setting.

The machine is delivered with 0 mins (normal cooling down period) set as standard.

You can select an extended cooling down time in 2 minute increments up to a maximum of 18 minutes.

You cannot extend the cooling down time for the Warm air, Cool air, Woollens handcare or Smoothing programmes.

## Airways indicator

Fluff should be removed after drying. The *Clean the filters* message will remind you to clean the filters when a certain amount of fluff has collected in them. You can decide at what level of fluff this reminder should be given.

You will have an idea of how often this should be done after a few drying programmes.

Off = *Clean the filters* does not appear

Heavy = *Clean the filters* only appears when there is a heavy build-up of fluff

Normal = Factory default setting

Light = *Clean the filters* appears when there is only a small build-up of fluff

A tick ✓ will appear beside the option to show that it has been set.

## Anti-crease action

The drum will continue to rotate at intervals for one hour to prevent laundry creasing, if you do not wish to remove it immediately.

A tick ✓ will appear beside the option to show that it has been set.

The machine is delivered with the option: On, set as standard.

The anti-crease function cannot be used with the *Woollens handcare* programme.

## Lock

The system lock prevents your machine being used without your knowledge.

When the system lock has been activated, you have to enter a code after switching the dryer on. Otherwise the dryer cannot be operated.

The door is not locked and can be opened at any time.

## To activate the lock


- Select *Activate* and confirm your selection.

## Settings menu

---

### To enter the code

The display will now request that a code is entered. The code is **250** and cannot be altered.

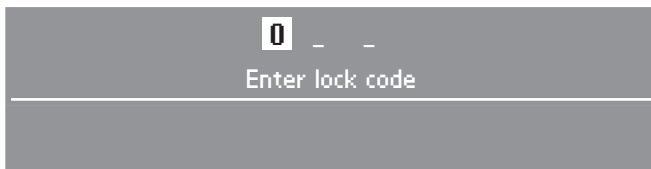

- Turn the multi-function selector until the number **2** appears. Confirm your selection of this number. Now set the second number.
- Repeat the process until all three numbers have been entered.

After the last number has been entered, you must confirm the code with OK.



- Confirm the code, then switch the dryer off.

### To unlock the machine

When the machine is switched on again, the display will request the lock code.

- Enter lock code **250** as described above, and confirm the entry.

### To deactivate the lock

- Proceed as for activating the lock.

### Buzzer

A buzzer sounds (at intervals for a maximum of 1 hr) to let you know the programme has finished.

Off = The buzzer will always sound when there is a fault, even if it has been switched off.

Normal = The buzzer sounds at the end of a programme.

Loud = The buzzer sounds louder at the end of a programme.

A tick ✓ will appear beside the option to show that it has been set.

The machine is delivered with the option: Normal, set as standard.

### Keypad tones

An audible tone sounds when the *Start* button, a short cut button or the multi-function selector is pressed.

A tick will appear beside the option to show that it has been set.

The machine is delivered with the option: Off, set as standard.

### Display contrast

There are ten different display contrast settings.

The bar chart shows you the setting.

# Settings menu

---

## Standby

To save energy, the display goes out after 10 minutes and the *Start* button flashes slowly.

There are two options:

Active (the machine is delivered with this option selected)

Standby is activated:

- if a programme is not selected after the machine has been switched on.
- after the *Start* button has been pressed.
- at the end of a programme.

Not in current programme

Standby is activated:

- if a programme is not selected after the machine has been switched on.

Operating the multi-function selector or one of the short cut buttons switches the display back on again.

A tick ✓ will appear beside the option to show that it has been set.

## Miele@home

This setting does not apply to this model.









**United Kingdom:**

Miele Co. Ltd.  
Fairacres, Marcham Road  
Abingdon, Oxon, OX14 1TW  
tel. Abingdon (01235) 554455  
Service Office: (01235) 554466  
fax (01235) 554477  
Internet: [www.miele.co.uk](http://www.miele.co.uk)

**Ireland:**

Miele Ireland Ltd.  
Broomhill Road, Tallaght, Dublin 24  
Tel: (01) 46 10 710, Fax: (01) 46 10 797  
Email: [info@miele.ie](mailto:info@miele.ie)  
Internet: <http://www.miele.ie>

**Australia:**

Miele Australia Pty. Ltd.  
A.C.N. 005635398  
1 Gilbert Park Drive  
Knoxfield, VIC 3180  
Telephone: (03) 9764 7100  
Fax: (03) 9764 7129  
Internet: [www.miele.com.au](http://www.miele.com.au)

**Distributor New Zealand:**

Steelfort Engineering Company. Ltd.  
500 Rangitikei Street  
Palmerston North, Priv. Bag 11045, NZ  
Telephone: (06) 350 1350  
Fax: (06) 356 1507

**South Africa:**

Miele (Pty) Ltd  
63 Peter Place  
Bryanston 2194  
P.O. Box 69434  
Bryanston 2021  
Tel.: (011) 548 1900  
Telefax (011) 548 1935  
Internet: [www.miele.co.za](http://www.miele.co.za)  
E-mail: [info@miele.co.za](mailto:info@miele.co.za)

**Singapore:**

Miele Southeast Asia  
Miele Pte. Ltd.  
163 Penang Road  
# 04 - 02/03 Winsland House II  
Singapore 238463  
Tel : +65-67351191  
Fax: +65-67351161  
Email: [infosea@miele.com.sg](mailto:infosea@miele.com.sg)

**Hong Kong:**

Miele (Hong Kong) Limited  
AIA Plaza, 24<sup>th</sup> Floor  
18 Hysan Avenue  
Causeway Bay  
Hong Kong  
Tel.: (852) 2610 1331  
Fax: (852) 2610 1013  
E-mail: [mielehk@miele.com.hk](mailto:mielehk@miele.com.hk)